


CAUTION: Installation and configuration should be performed only by personnel who are technically competent to do so. Local Regulations regarding electrical installation & safety must be observed.

1. INSTALLATION


Panel-Mounting

The mounting panel must be rigid and may be up to 6.0mm (0.25 inches) thick. The cut-out required for the instrument is shown on the right. Instruments may be mounted side-by-side in a multiple installation for which the cut-out width (for *n* instruments) is (48*n*-4)mm or (1.89*n*-0.16)inches.

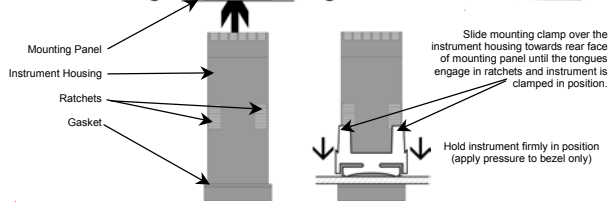


CAUTION: Do not remove the panel gasket; it is a seal against dust and moisture.

Rear Terminal Wiring

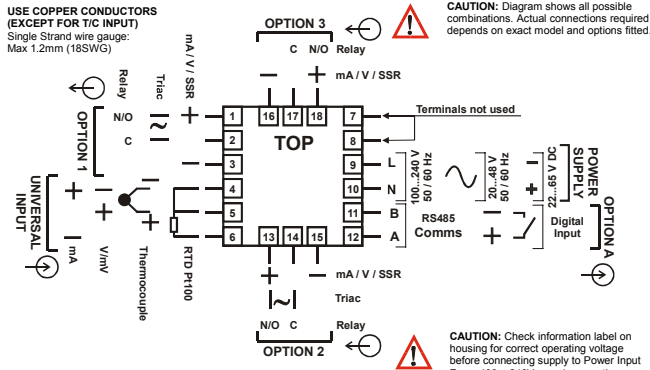


Installing Option Modules

CAUTION: Turn off all power. Remove instrument by gripping the sides of the front panel and pulling the instrument out of its housing. **Note its orientation.**

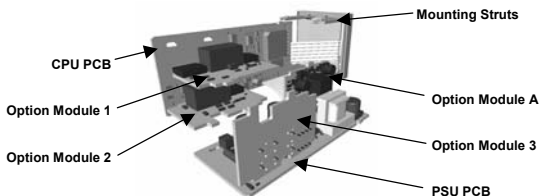

To access modules 1 or A, first detach the PSU and CPU boards from the front moulding by lifting first the upper, and then lower mounting struts.
 a). Plug the required option modules into the correct connectors, as shown below.
 b). Locate the tongues on each module into the corresponding slot in the board opposite.
 c). Hold the main boards together while relocating them back on the mounting struts.
 d). Replace the instrument by aligning the CPU and PSU boards with their guides in the housing, then slowly push the instrument back into position.
Note: The instrument will automatically detect which option modules have been fitted.

Option Module Connectors

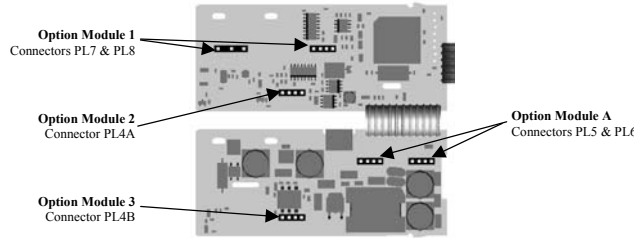

2. SELECT MODE

Select mode is used to access the configuration and operation menu functions. It can be accessed at any time by holding down [] and pressing [A]. Once in select mode, press [A] or [V] to select the required mode. An unlock code is required to prevent unauthorised entry to all except Operator or Product Information modes. Press [A] or [V] to enter the correct code number, then press [] to proceed.

| Mode | Upper Display | Lower Display | Description | Default Unlock Codes |
|---------------|---------------|---------------|-------------------------------------|----------------------|
| Operator | OPtr | SLCt | Normal instrument operation. | None |
| Set Up | SEtP | SLCt | Tailor settings to the application. | 10 |
| Configuration | ConF | SLCt | Configures the instrument for use. | 20 |
| Product Info | Info | SLCt | Check manufacturing information. | None |
| Auto-Tuning | Autun | SLCt | Invoke Pre-Tune or Self-Tune. | 0 |

Note: The instrument will always return automatically to Operator mode if there is no key activity for 2 minutes.

3. CONFIGURATION MODE

First select Configuration mode from Select mode (refer to section 2). Press [] to scroll through the parameters, then press [A] or [V] to set the required value. To accept a change [] must be pressed, otherwise parameter will revert to previous value. To exit from Configuration mode, hold down [] and press [A], to return to Select mode.
Note: Parameters displayed depend on how instrument has been configured. Parameters marked * are repeated in Setup Mode.

| Parameter | Lower Display | Upper Display | Adjustment range | Default |
|-------------------------------|---------------|---------------|---|----------------------|
| Input Range/Type | inPt | | See following table for possible codes | J T/C |
| Scale Range Upper Limit | rUL | | Scale Range Lower Limit +100 to Range Max | Range max (Lin=1000) |
| Scale Range Lower Limit | rLL | | Range Min. to Scale Range Upper Limit -100 | Range min (Linear=0) |
| Decimal point position | dPoS | | 0=XXXX, 1=XXX.X, 2=XX.XX, 3=X.XXX (non-temperature ranges only) | 1 |
| Control Type | CtYP | SnGL | Primary (heat) only | SnGL |
| Primary Output Control Action | CtLr | rEu | Reverse Acting | rEu |
| | | d r | Direct Acting | |
| Alarm 1 Type | ALR1 | P_H i | Process High Alarm | P_H i |
| | | P_Lo | Process Low Alarm | |
| | | dE | Deviation Alarm | |
| | | bAnd | Band Alarm | |
| | | nonE | No alarm | |
| High Alm 1 value* | PhR1 | | Range Min. to Range Max in display units | Range Max. |
| Low Alm 1 value* | PLR1 | | | Range Min. |
| Band Alm 1 value* | bAL1 | | 1 LSD to span from setpoint in display units | 5 |
| Dev. Alm 1 value* | dAL1 | | +/- Span from setpoint in display units | 5 |
| Alm 1 Hysteresis* | AHY1 | | 1 LSD to full span in display units | 1 |
| Alarm 2 Type* | ALR2 | | | P_Lo |
| High Alm 2 value* | PhR2 | | | Range Max. |
| Low Alm 2 value* | PLR2 | | | Range Min. |
| Band Alm 2 value* | bAL2 | | Options as for alarm 1 | 5 |
| Dev. Alm 2 Value* | dAL2 | | | 5 |
| Alm 2 Hysteresis* | AHY2 | | | 1 |
| Loop Alarm | LAEn | | d iSA(disabled) or EnAb(enabled) | d iSA |

| Parameter | Lower Display | Upper Display | Adjustment range | Default |
|-----------------------------------|---------------|---------------|--|------------|
| Loop Alarm Time* | LAEt | | 1 sec to 99 mins. 59secs (only applies if primary proportional band = 0) | 99.59 |
| Alarm Inhibit | Inh i | nonE | No alarms Inhibited | nonE |
| | | ALA i | Alarm 1 inhibited | |
| | | ALAR2 | Alarm 2 inhibited | |
| | | both | Alarm 1 and alarm 2 inhibited | |
| Output 1 Usage | USE1 | Pr i | Primary (Heat) Power | Pr i |
| | | SEc | Secondary (Cool) Power | |
| | | ALd | Alarm 1, Direct | |
| | | ALr | Alarm 1, Reverse | |
| | | ARd | Alarm 2, Direct | |
| | | ARr | Alarm 2, Reverse | |
| | | LPd | Loop Alarm, Direct | |
| | | LPr | Loop Alarm, Reverse | |
| | | ORd | Logical Alarm 1 OR 2, Direct | |
| | | ORr | Logical Alarm 1 OR 2, Reverse | |
| Retransmit Output 1 Scale maximum | roIH | 0_5 | 0 – 5 V DC output 1 | 0_10 |
| | | 0_10 | 0 – 10 V DC output | |
| | | 2_10 | 2 – 10 V DC output | |
| | | 0_20 | 0 – 20 mA DC output | |
| Retransmit Output 1 Scale minimum | roIL | 4_20 | 4 – 20 mA DC output | |
| | | | | |
| Retransmit Output 2 Scale maximum | ro2H | | -1999 to 9999 (display value at which output will be maximum) | Range max |
| Retransmit Output 2 Scale minimum | ro2L | | -1999 to 9999 (display value at which output will be minimum) | Range min |
| Output 2 Usage | USE2 | | As for output 1 | Sec or AI2 |
| Lin. O/P 2 Range | tYP2 | | | 0_10 |
| Retransmit Output 3 Scale maximum | ro3H | | -1999 to 9999 (display value at which output will be maximum) | Range max |
| Retransmit Output 3 Scale minimum | ro3L | | -1999 to 9999 (display value at which output will be minimum) | Range min |
| Output 3 Usage | USE3 | | | ALd |
| Linear Output 3 Range | tYP3 | | As for output 1 | 0_10 |
| Display Strategy | d iSP | | 1, 2, 3, 4, 5 or 6 (refer to section 7) | 1 |
| Comms Protocol | PrAb | ASC i | ASCII | PrAbn |
| | | PrAbn | Modbus with no parity | |
| | | PrAbE | Modbus with Even Parity | |
| | | PrAbO | Modbus with Odd Parity | |
| Bit rate | bAud | 1.2 | 1.2 kbps | 4.8 |
| | | 2.4 | 2.4 kbps | |
| | | 4.8 | 4.8 kbps | |
| | | 9.6 | 9.6 kbps | |
| | | 19.2 | 19.2 kbps | |
| Comms Address | RdDr | | 1 – 255 (Modbus), 1-99 (ASCII) | 1 |
| Comms Write | CoEn | | Read only or read/write | r_Lw |
| Digital Input Usage | d iG i | d iS1 | Setpoint 1 / Setpoint 2 select | d iS1 |
| | | d iAS | Automatic / Manual select | |
| Config Lock Code | CLoc | | 0 to 9999 | 20 |

Note: Refer to the full user guide (available from your supplier) for further details on these parameters.

| Code | Input Type & Range | Code | Input Type & Range | Code | Input Type & Range |
|------|----------------------|------|---------------------------------|-------------|----------------------------------|
| bC | B: 100 – 1824 °C | LC | L: 0.0 – 537.7 °C | P24F | PIR: 20% vs 40%: 32 – 3362 °C |
| bF | B: 211 – 3315 °F | LF | L: 32.0 – 999.9 °F | | |
| CC | C: 0 – 2320 °C | NC | N: 0 – 1399 °C | PLC | PI100: -199 – 800 °C |
| CF | C: 32 – 4208 °F | NF | N: 32 – 2551 °F | PLF | PI100: -328 – 1472 °F |
| JC | J: -200 – 1200 °C | RC | R: 0 – 1759 °C | PLC | PI100: -128.8 – 537.7 °C |
| JF | J: -328 – 2192 °F | RF | R: 32 – 3198 °F | PLF | PI100: -199.9 – 999.9 °F |
| JC | J: -128.8 – 537.7 °C | SC | S: 0 – 1762 °C | 0.20 | 0 – 20 mA DC |
| JF | J: -199.9 – 999.9 °F | SF | S: 32 – 3204 °F | 4.20 | 4 – 20 mA DC |
| KC | K: -240 – 1373 °C | TC | T: -240 – 400 °C | 0.50 | 0 – 50 mV DC |
| KF | K: -400 – 2503 °F | TF | T: -400 – 752 °F | 10.50 | 10 – 50 mV DC |
| KC | K: -128.8 – 537.7 °C | TC | T: -128.8 – 400.0 °C | 0.5 | 0 – 5 V DC |
| KF | K: -199.9 – 999.9 °F | TF | T: -199.9 – 752.0 °F | 1.5 | 1 – 5 V DC |
| LC | L: 0 – 762 °C | P24C | PIR: 20% vs 40%: 0 – 1850 °C | 0.10 | 0 – 10 V DC |
| LF | L: 32 – 1403 °F | | 2.10 | 2 – 10 V DC | |

4. SETUP MODE

Note: Configuration must be completed before adjusting Setup parameters.
First select Setup mode from Select mode (refer to section 2). While in Setup Mode, Press \leftarrow to scroll through the parameters, then press \uparrow or \downarrow to set the required value. To exit from Setup mode, hold down \leftarrow and press \uparrow , to return to Select mode.
Note: Parameters displayed depends on how instrument has been configured.

| Parameter | Lower Display | Upper Display Adjustment Range | Default |
|---------------------------------|---------------|---|-----------------|
| Input Filter Time constant | F ILT | OFF or 0.5 to 100.0 secs | 2.0 |
| Process Variable Offset | OFFS | +/- Span of controller | 0 |
| Primary (Heat) power | PPUJ | Current power levels (read only) | N/A |
| Secondary (Cool) power | SPUJ | | |
| Primary Proportional Band | Pb.P | 0.0% (ON/OFF) and 0.5% to 999.9% of input span. | 10.0 |
| Secondary Proportional Band | Pb.S | | |
| Automatic Reset (Integral Time) | ARSt | 1 sec to 99 mins 59 secs and OFF | 5.00 |
| Rate (Derivative Time) | rALtE | 00 secs to 99 mins 59 secs | 1.15 |
| Overlap/Deadband | OL | -20 to +20% of Primary and Secondary Proportional Band | 0 |
| Manual Reset (Bias) | b rAS | 0% (-100% if dual control) to 100% | 25 |
| Primary ON/OFF Differential | d rFP | 0.1% to 10.0% of input span centered about the setpoint | 0.5 |
| Secondary ON/OFF Diff. | d rFS | | |
| Prim. & Sec. ON/OFF Diff. | d rFF | | |
| Setpoint Upper Limit | SPUL | Current Setpoint to Range max | R/max |
| Setpoint Lower limit | SPLL | Range min to Current Setpoint | R/min |
| Primary Output Power Limit | OPUL | 0% to 100% of full power. | 100 |
| Output 1 Cycle Time | Ct 1 | 0.5, 1, 2, 4, 8, 16, 32, 64, 128, 256 or 512 secs. | 32 |
| Output 2 Cycle Time | Ct 2 | | |
| Output 3 Cycle Time | Ct 3 | | |
| High Alarm 1 value | Phr 1 | Range Min. to Range Max. | R/max |
| Low Alarm 1 value | PLr 1 | | R/min |
| Deviation Alarm 1 Value | dAL 1 | +/- Span from SP in display units | 5 |
| Band Alarm 1 value | bAL 1 | 1 LSD to span from setpoint | 5 |
| Alarm 1 Hysteresis | HY 1 | 1 LSD to full span in display units | 1 |
| High Alarm 2 value | Phr 2 | Range Min. to Range Max. | R/max |
| Low Alarm 2 value | PLr 2 | | R/min |
| Deviation Alarm 2 Value | dAL 2 | +/- Span from SP in display units | 5 |
| Band Alarm 2 value | bAL 2 | 1 LSD to span from setpoint | 5 |
| Alarm 2 Hysteresis | HY 2 | 1 LSD to full span in display units | 1 |
| Loop Alarm Time | LALt | 1 sec to 99 mins. 59secs. | 99.59 |
| Auto Pre-tune | rPE | disabled or enabled | d rSR |
| Auto/manual Control selection | PoEn | | |
| Setpoint ramping | SPr | | |
| SP Ramp Rate Value | rP | 1 to 9999 units/hour or Off (blank) | Off |
| SP Value | SP | Scale range upper to lower limits | Scale Range min |
| SP1 Value | SP 1 | Scale range upper to lower limits | |
| SP2 Value | SP 2 | "_" indicates currently active SP. | |
| Setup Lock Code | SLoc | 0 to 9999 | 10 |

5. AUTOMATIC TUNING MODE

First select Automatic tuning mode from Select mode (refer to section 2). Press \leftarrow to scroll through the modes, then press \uparrow or \downarrow to set the required value. To exit from Automatic tuning mode, hold down \leftarrow and press \uparrow , to return to Select mode. Pre-tune is a single-shot routine and is thus self-disengaging when complete. If **rPE** in Setup mode = **EnAb**, Pre-tune will attempt to run at every power up*. Refer to the full user guide (available from your supplier) for details on controller tuning.

| Parameter | Lower Display | Upper Display Adjustment Range | Default |
|-----------|---------------|---|---------|
| Pre-Tune | Ptun | On or OFF. Indication remains OFF if automatic tuning cannot be used at this time*. | OFF |
| Self-Tune | Stun | | |
| Tune Lock | tLoc | 0 to 9999 | 0 |

* Note: Automatic tuning will not engage if either proportional band = 0. Also, Pre-tune will not engage if setpoint is ramping, or the PV is within 5% of span of the setpoint.

6. PRODUCT INFORMATION MODE

First select Product information mode from Select mode (refer to section 2). Press \leftarrow to view each parameter. To exit from Product Information mode, hold down \leftarrow and press \uparrow , to return to Select mode. Note: These parameters are all read only.

| Parameter | Lower Display | Upper Display | Description |
|-------------------------------------|---------------|---------------|--|
| Input type | In 1 | Un 1 | Universal input only |
| Option 1 module type fitted | OPn 1 | nonE | No option fitted. |
| | | rLY | Relay |
| | | SSr | SSR drive |
| | | Tr 1 | Triac |
| | | L in | Linear voltage / Current output |
| Option 2 type fitted | OPn 2 | | As Option 1. |
| Option 3 type fitted | OPn 3 | | |
| Auxiliary Option module type fitted | OPnR | nonE | No option fitted |
| | | r485 | RS485 comms |
| | | d IG 1 | Digital Input |
| Firmware type | FLW | | Value displayed is firmware type number |
| Firmware issue | ISS | | Value displayed is firmware issue number |
| Product Revision Level | PrL | | Value displayed is Product Revision level. |
| Date of manufacture | d0r7 | | Manufacturing date code (mmyy) |
| Serial number 1 | Sn 1 | | First four digits of serial number |
| Serial number 2 | Sn 2 | | Middle four digits of serial number |
| Serial number 3 | Sn 3 | | Last four digits of serial number |

7. OPERATOR MODE

This mode is entered at power on. It can also be accessed from Select mode (see section 2). Note: All configuration mode and Setup mode parameters must be set as required before starting normal operations. Press \leftarrow to scroll through the parameters, then press \uparrow or \downarrow to set the required value. Note: All parameters in Display strategy 6 are read only, and can only be adjusted via Setup mode.

| Upper Display | Lower Display | Display Strategy When Visible | Description |
|-----------------|-----------------|---|--|
| PV Value | Active SP Value | 1 & 2 (initial screen) | PV and target value of selected SP <i>SP adjustable in Strategy 2</i> |
| PV Value | Actual SP Value | 3 & 6 (initial screen) | PV and actual value of selected SP (e.g. ramping SP value). <i>Read only</i> |
| PV Value | (Blank) | 4 (initial screen) | Process variable only. <i>Read only</i> |
| Active SP Value | (Blank) | 5 (initial screen) | Target value of selected setpoint only. <i>Read only</i> |
| SP Value | SP | 1, 3, 4, 5 & 6 if digital input is not d rS I | Target value of SP <i>Adjustable except in Strategy 6</i> |
| SP1 Value | - SP 1 | "_"lit if dig I/P = d rS I and active SP is SP1 | Target value of SP1 <i>Adjustable except in Strategy 6</i> |
| SP2 Value | - SP 2 | "_"lit if dig I/P = d rS I and active SP is SP2 | Target value of SP2 <i>Adjustable except in Strategy 6</i> |
| Actual SP Value | SPrP | SPr enabled and rP is not zero | Actual (ramping) value of selected SP <i>Read only</i> |

| Upper Display | Lower Display | Display Strategy When Visible | Description |
|---------------|---------------|---|--|
| Ramp Rate | rP | SPr enabled in Setup mode | SP ramping rate, in units per hour. <i>Adjustable except in Strategy 6</i> |
| Active Alarms | ALSt | When one or more alarms are active. ALM indicator will also flash | Alarm 2 active Alarm 1 active Loop Alarm active |

Manual Control

If **PoEn** is set to **EnAb** in Setup mode, manual control can be selected/de-selected by pressing the \leftarrow key while in Operator mode, or by changing the status of the digital input if **d rIG 1** has been configured for **d rAS** in Configuration mode. The \leftarrow indicator will flash while in Manual Control mode and the lower display will show Pxxx (where xxx is the current manual power level). Switching to/from manual mode is via Bumpless Transfer. Press \leftarrow or \downarrow to set the required output power. **Caution: Not restricted by OPUL limit.**

8. ERROR/FAULT INDICATIONS

| Parameter | Upper Display | Lower Display | Description |
|---|---------------|---------------|--|
| Instrument parameters in default conditions | GoTo | Conf | Configuration & Setup required. Seen at first turn on or if hardware configuration changed. Press \leftarrow to enter the Configuration Mode, next press \uparrow or \downarrow to enter the unlock code number, then press \leftarrow to proceed. |
| Over Range | rHH 1 | Normal | Input > 5% over-range |
| Under Range | rLL 1 | Normal | Input > 5% under-range |
| Sensor Break | OPEN | Normal | Break in input sensor or wiring |
| Option 1 Error | | OPn 1 | Option 1 module fault |
| Option 2 Error | | OPn 2 | Option 2 module fault |
| Option 3 Error | | OPn 3 | Option 3 module fault |
| Option A Error | | OPnR | Auxiliary Option module fault |

9. SERIAL COMMUNICATIONS

Refer to the full user guide (available from your supplier) for details of this option.

10. SPECIFICATIONS

UNIVERSAL INPUT

Impedance: >10MΩ resistive, except DC mA (5Ω) and V (47kΩ).
Isolation: Isolated from all outputs (except SSR) at 240VAC.

DIGITAL INPUT

Volt-free (or TTL): Open(2-24VDC) = SP1 or Auto, Closed(<0.8VDC) = SP2

OUTPUTS

Relay

Contact Type/Rating: Single pole (SP); 2A resistive at 120/240VAC.
Lifetime: >500,000 operations at rated voltage/current.
Isolation: Isolated from input and other outputs.

SSR Drive/TTL

Drive Capability: SSR >10V into 500Ω min.
Isolation: Not isolated from input or other SSR drive outputs.

Triac

Operating Voltage: 20 - 280Vrms (47 - 63Hz)
Current Rating: 0.01 - 1A (full cycle rms on-state @ 25°C); derates linearly above 40°C to 0.5A @ 80°C.
Isolation: Isolated from input and other outputs.

DC

Resolution: 8 bits in 250ms (10 bits in 1s typical, >10 bits in >1s typical).
Isolation: Isolated from input and other outputs.

OPERATING CONDITIONS FOR INDOOR USE

Ambient Temperature: 0°C to 55°C (Operating) / -20°C to 80°C (Storage)
Relative Humidity: 20% - 95% non-condensing
Supply Voltage: 100 - 240VAC 50/60Hz 7.5VA for mains powered versions.
20 - 48VAC 50/60Hz (option) 7.5VA or
22 - 65VDC 5W maximum for low voltage versions

ENVIRONMENTAL

Standards: CE, UL, ULC
EMI: Complies with EN61326 (Susceptibility & Emissions)
Safety Considerations: Complies with EN61010-1 & UL3121
Pollution Degree 2, Installation Category II

Front Panel Sealing: To IP66

PHYSICAL

Dimensions Depth: 110mm (behind panel)
Front panel height and width: 48mm x 48mm / Weight: 0.21kg maximum